

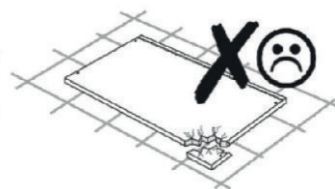
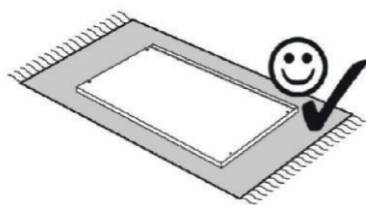
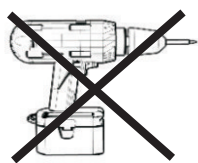
## ASSEMBLY INSTRUCTION

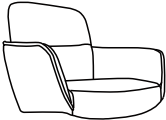







# ROSWELL ARMCHAIR



# ROWICO

H O M E



Ax1 	Fx9  M6x30MM
Bx1 	Gx2  M6x20MM
Cx1 	Hx2  M6x25MM
Dx1 	Jx1  5MM
Ex1 