




ASSEMBLY INSTRUCTION





BRODERICK LOUNGE CHAIR




ROWICO


H O M E

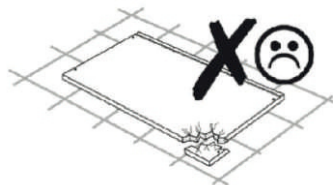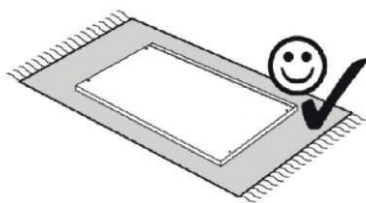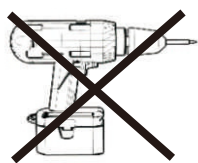

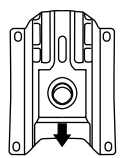
Ax1 	Gx1 
Bx1 	Hx4  M6x25MM
Cx2 	Jx4  M6x18MM
Dx1 	Kx4  Ø25xØ10x3MM
Ex1 	Lx8  25x10x3MM
Fx1 	Mx1  N5

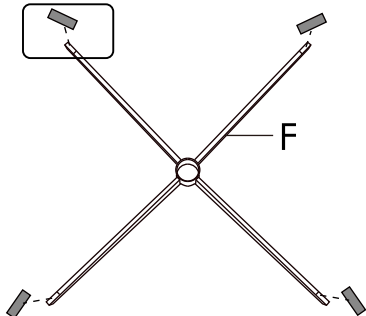


②

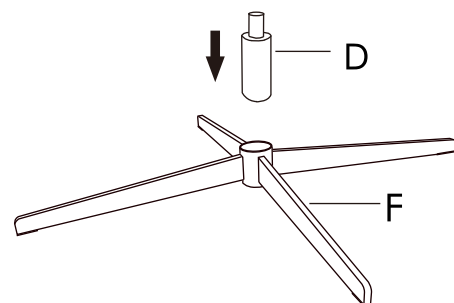

③

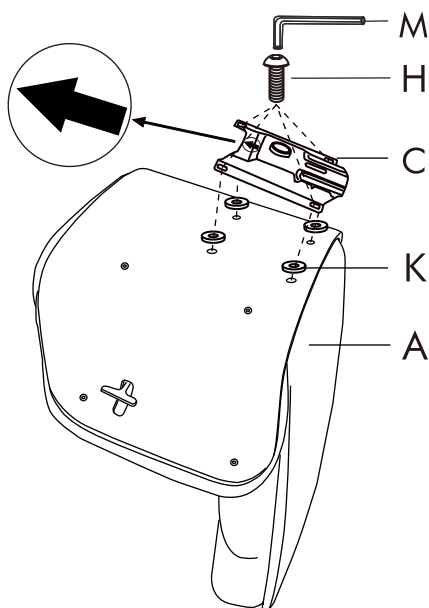

④

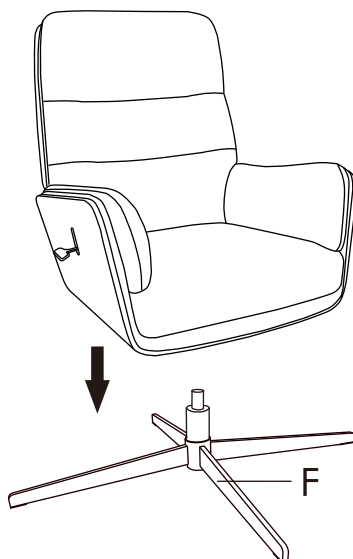

⑤

